



# SAFETY POSTER INSTRUCTIONS FOR THE SAFE HANDLING OF YOUR CUTTING TOOL

**martor**


## SECUNORM HANDY

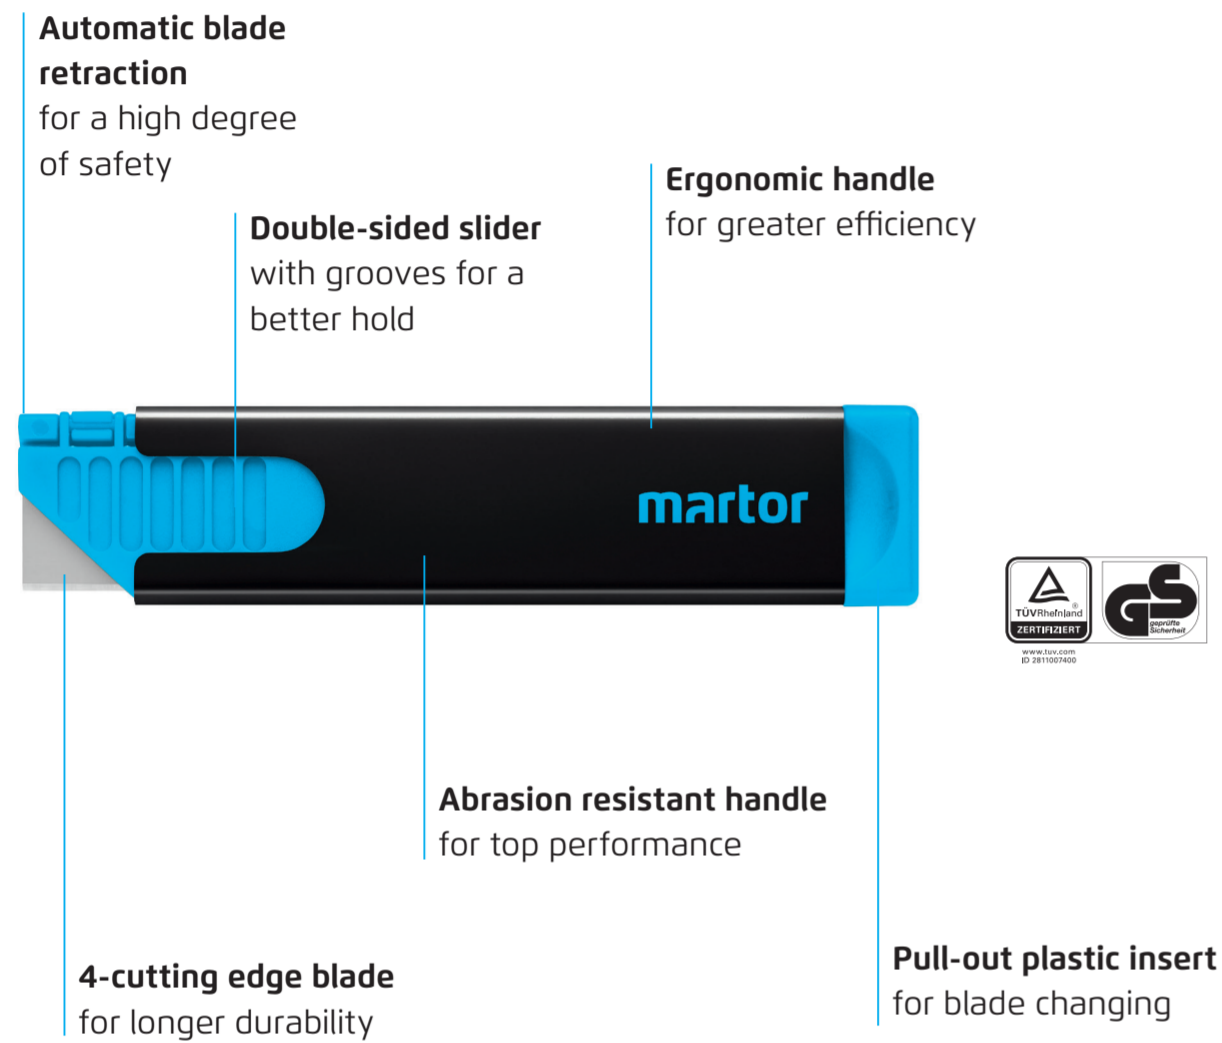


### USAGE

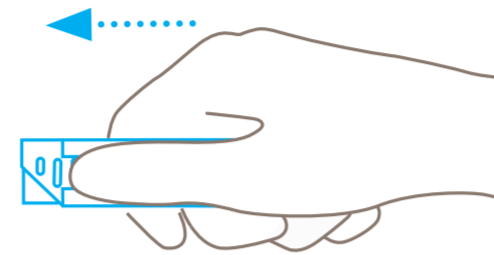


Use the slider to **engage the blade** for cutting.

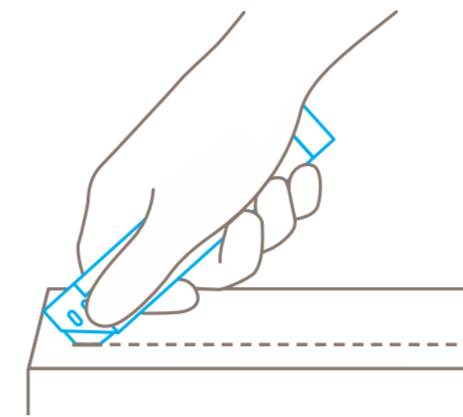

**Pierce** into the cutting material to cut.

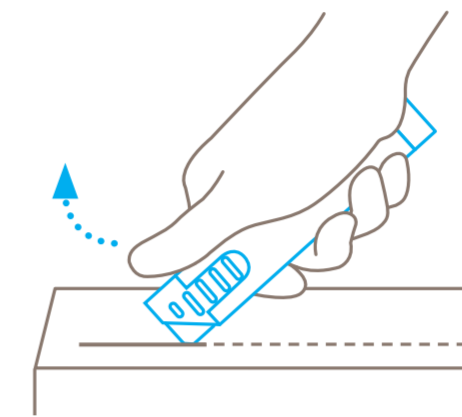


Always remove your **thumb from the slider** to ensure automatic blade retraction.

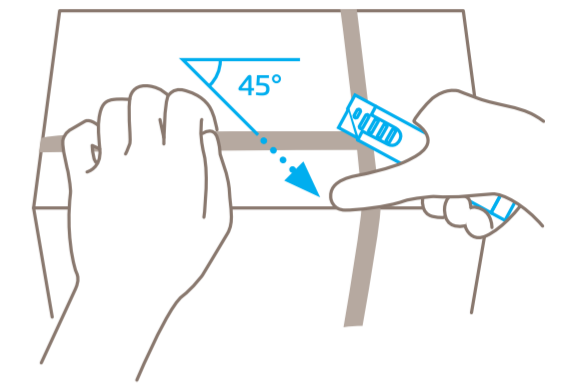


For best results, cut plastic strapping band **diagonally** (at a 45° angle).


### BLADE CHANGE

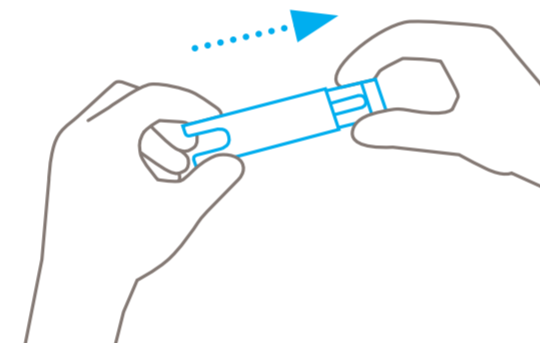


Pull plastic part out of handle's end. **Don't** pull the insert while holding onto the slider.

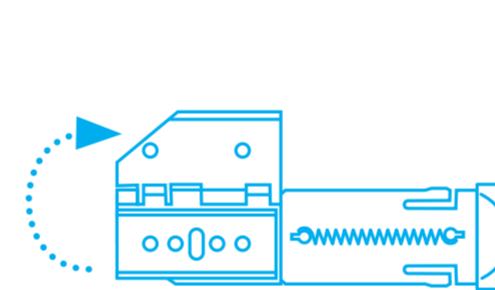

**Open up** the blade cover.

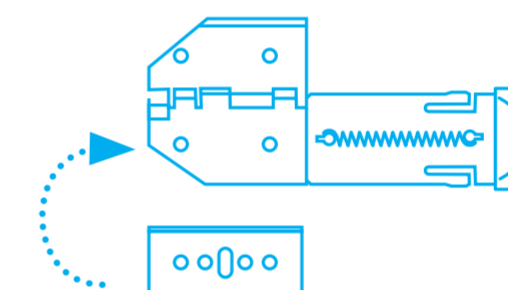


Reverse or replace the blade, make sure it fits **exactly** over the locating lugs.

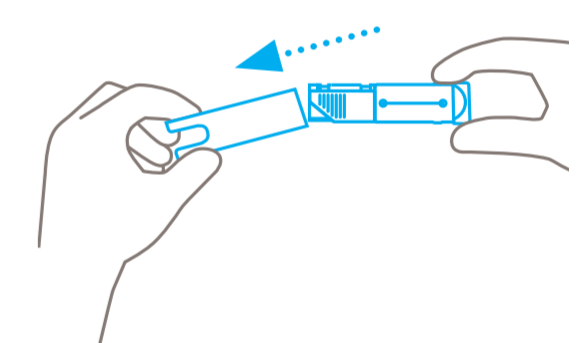


Finally, re-insert the plastic insert and blade **fully into the handle**.

### PROTECTION OF USER

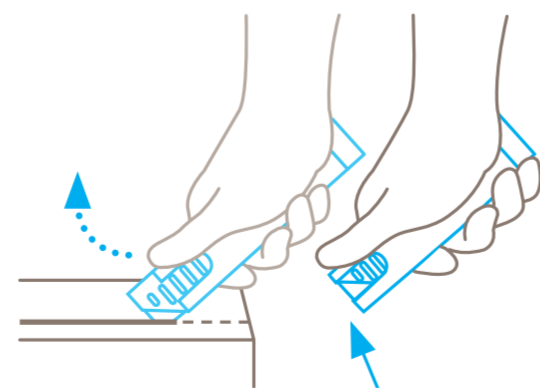


Following cutting, the blade immediately retracts into the handle. Condition: you have **released hold of the slider**.

### PROTECTION OF GOODS

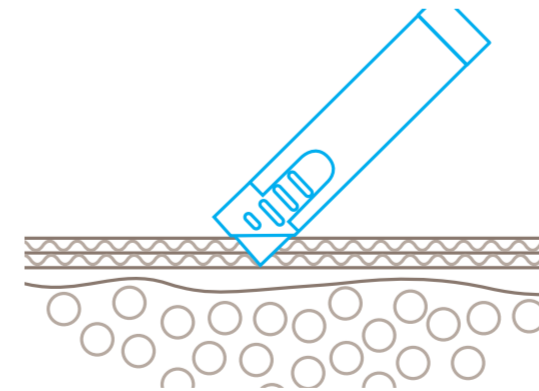


An appropriately **small cutting depth** serves to protect your goods.

### DISPOSAL

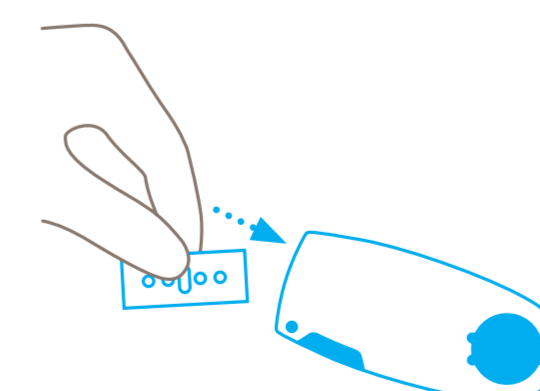

Your **SAFEBOX** is the best place to store **used blades**.

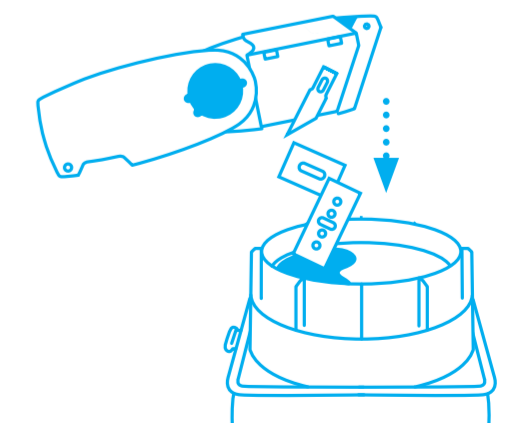

When the **SAFEBOX** is full, **empty all contents** into your **USED BLADE CONTAINER**.

**Please note:** To ensure your product always functions flawlessly, regularly remove any impurities. For additional safety, we recommend wearing gloves.