

## SAFETY POSTER INSTRUCTIONS FOR THE SAFE HANDLING OF YOUR CUTTING TOOL

# SECUPRO MAXISAFE

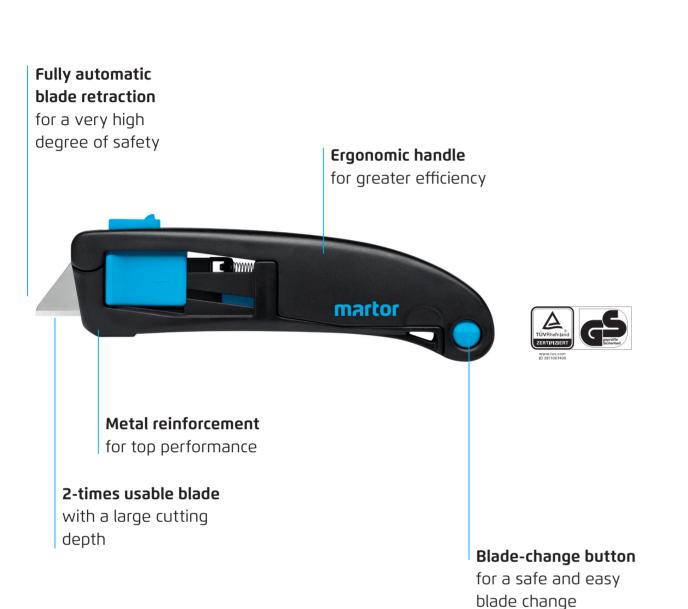


### USAGE

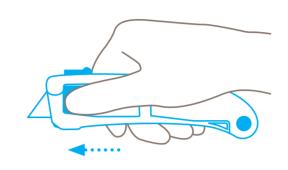

Use the slider to **engage the blade** for cutting.

whilst cutting.


#### **BLADE CHANGE**

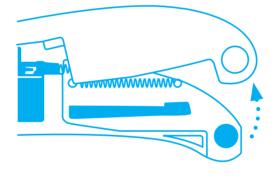

To change the blade, **press the button** at the end of the cutter and fold open the upper half of the handle.

### **PROTECTION OF USER**


DISPOSAL

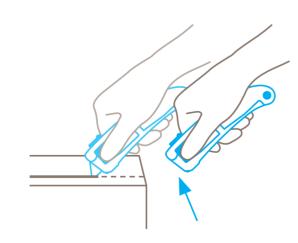


The blade automatically retracts into the handle the moment cutting ceases. Even when the slider is still **being held forwards**. Your SAFEBOX is the best place to store used blades.

**Please note:** to ensure your product always functions flawlessly, regularly remove any build-up of cutting material.


# martor

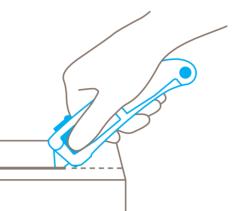


It is safe to leave your **thumb on the slider** 

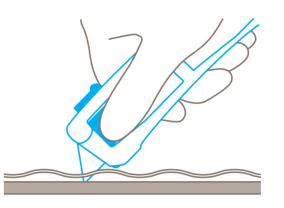


When cutting foil, be sure there is **enough counter-pressure** that the blade does not retract by itself.

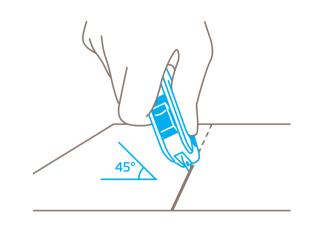


For best results, hold the cutter at **a slight** angle when cutting adhesive tape.

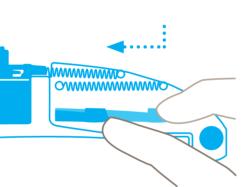


Release the blade carrier by **pressing down** and pushing forward, as indicated.

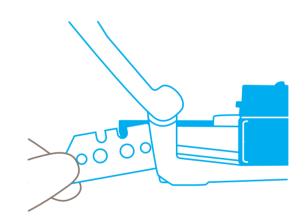


Now either rotate or change the blade, before pulling the blade carrier back into its original position.

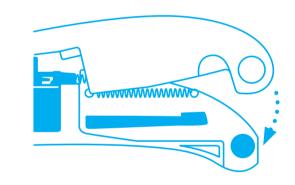

Finally, fold the **upper half of the handle back down** until it snaps into place. Please check blade retraction!

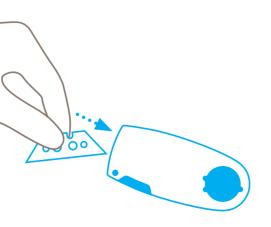

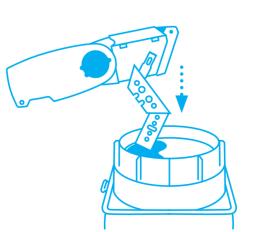

When the SAFEBOX is full, empty all contents into your RECYCLING BOX.