
SAFETY POSTER INSTRUCTIONS FOR THE SAFE HANDLING OF YOUR CUTTING TOOL

SECUNORM PROFI LIGHT

USAGE

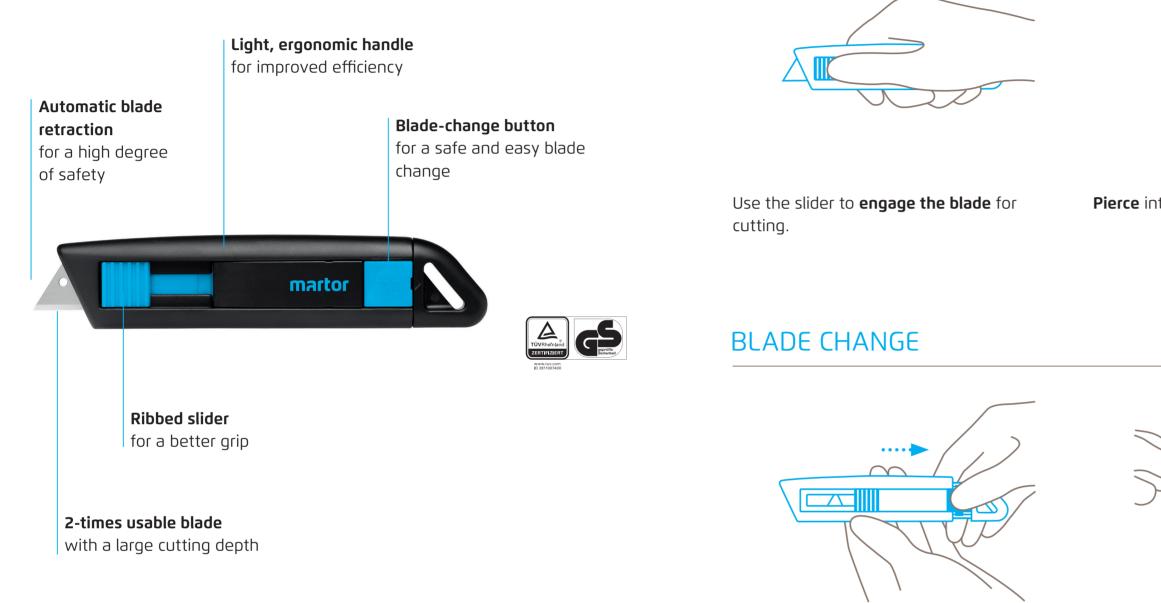


Press the blade-change button and **pull out** the plastic insert.

blade.

PROTECTION OF USER

DISPOSAL

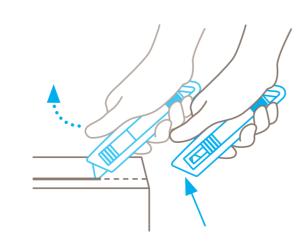


Following cutting, the blade immediately retracts into the handle. Condition: you have released hold of the slider.

Your SAFEBOX is the best place to store used blades.


Please note: to ensure your product always functions flawlessly, regularly remove any build-up of cutting material.




martor

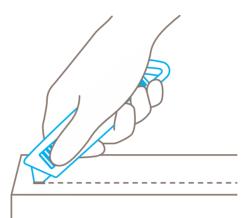


Pierce into the cutting material to cut.

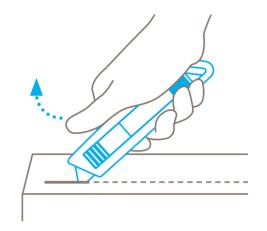


Always remove your **thumb from the slider** to ensure automatic blade retraction.

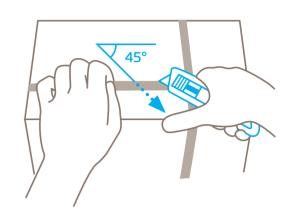


For best results, cut plastic strapping band diagonally (at a 45° angle).

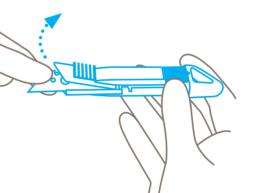


Take hold of the blade and nudge the blade cover open: either rotate or replace the

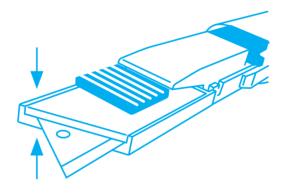


Be sure to close the blade cover so that it lies flush with the blade holder.

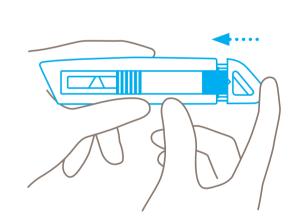


Finally, push the plastic insert back into the handle until you hear it click into place

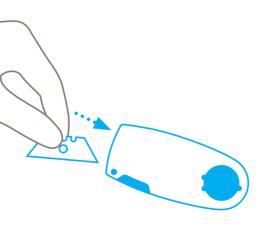

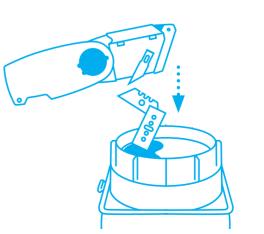


When the SAFEBOX is full, **empty all contents** into your RECYCLING BOX.

SAFETY POSTER INSTRUCTIONS FOR THE SAFE HANDLING OF YOUR CUTTING TOOL

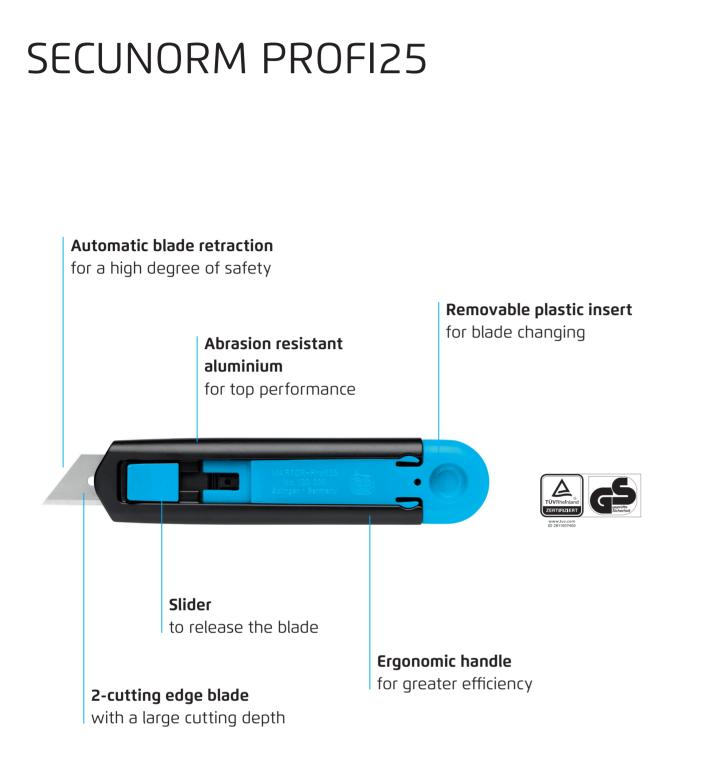



USAGE

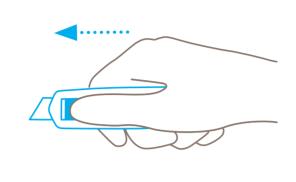

Use the slider to **engage the blade** for cutting.

BLADE CHANGE

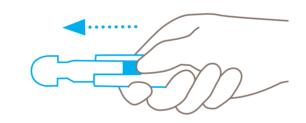


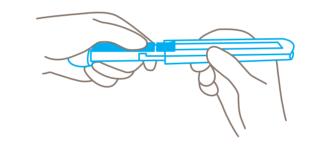

Use the slider to **push** the plastic insert back and out of the handle. Don't pull the insert while holding onto the slider.

PROTECTION OF USER

DISPOSAL

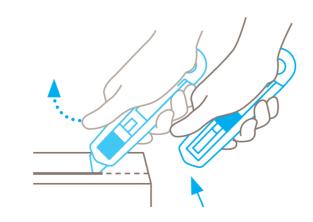


Following cutting, the blade immediately retracts into the handle. Condition: you have released hold of the slider.

Your SAFEBOX is the best place to store **used** blades.


Please note: To ensure your product always functions flawlessly, regularly remove any impurities. For additional safety, we recommend wearing gloves.




martor

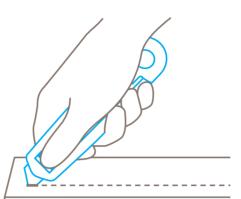

Pierce into the cutting material to cut.

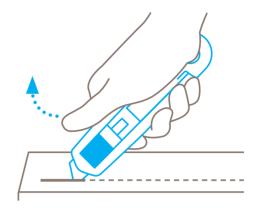


Always remove your **thumb from the slider** to For best results, cut plastic strapping band ensure automatic blade retraction.

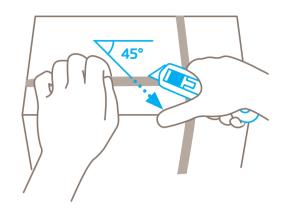


diagonally (at a 45° angle).


When the slider and blade exits the handle, position your **index finger under the black** blade holder to hold it tight.

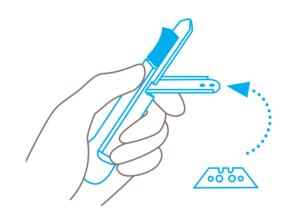


Use your index finger to slowly **fold out the blade holder downwards**. Use the other hand to remove the blade to either replace it or turn it around.

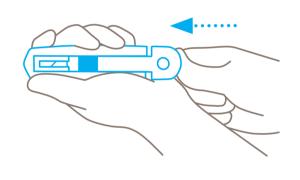

Make sure you position the blade **exactly** over the locating lugs, close the blade holder upwards. Attention: Never hold your hand in front of the blade exit!

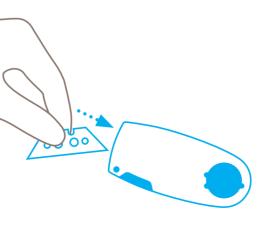

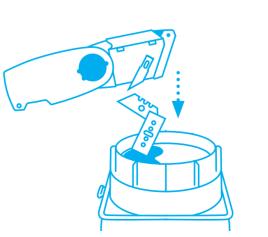

When the SAFEBOX is full, **empty all contents** into your USED BLADE CONTAINER.